
LiquidFiller PX & PXT - Quick Manual ver 2.5 A

Date: 2016/01/20 10:00:12.393 - S/N: N/A

1. Assembly of the machine:

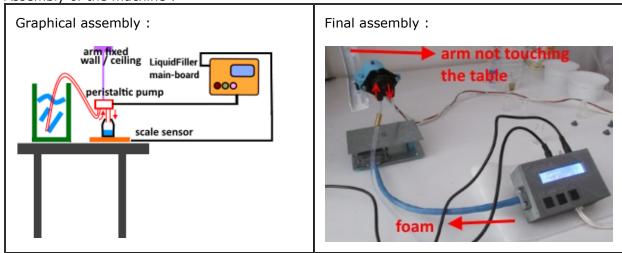

- 2. Do not over-press the scale beyond its current maximum rate. You risk to permanently damage the device.
- 3. Before start filling make sure from the weight mode that the scale unloaded is at Odg, if not, unload the scale, switch off the machine and re-power it again.
- 4. By pressing the [red/orange] START button the valve opens/stops (manual mode).
- 5. While LiquidFiller is filling containers the red LED is ON.
 - When the red LED is OFF (in the LCD screen should appear the letter F(inish)) then the filling is done.
 - The pump during the filling process might close and reopen so ignore the on/off sound of the peristaltic pump.
- 6. After **50 containers** the machine will ask you to unload the scale and press the SET button in order to self-calibrate the machine.
 - This prevents any weight inaccuracies caused by thermal drift.
- 7. LiquidFiller can be used as a scale for **100 sec** after that period of time you have to unload the scale and press the SET button.
- 8. Make sure you back up your LiquidUSB key. More instructions at the manual.
- 9. A data logger and pilot program called "LiquidFiller Data Logger" is stored at the LiquidUSB key. Works under Windows and Linux.
- 10. LiquidUSB is also bootable and contains a Xubuntu Live Permanent distro with "LiquidFiller Data Logger" pre-installed.
- 11. [In PXT models only]: Do not operate the tablet on battery use always the power adapter of the tablet.
- 12. [In PXT models only] : The Android data logger application is bundled into a dedicated tablet, it is not located in LiquidUSB.
- 13. **Please read the full manual before using LiquidFiller** which can be found at : the root folder of LiquidUSB (LiquidFiller X and XT Official Documentation.pdf) or at : www.trustfm.net/hardware/LiquidFiller.php?page=Documentation [latest version]

Thank you for your attention!